

Water-ID

OPERATIONAL EXCELLENCE & CRITICAL/QUALITY ALERT



General Purpose (GP) pictured

REAL-TIME NON-INTRUSIVE INDEPENDENT WATER DETECTION ALARM

- API 2350 Compliant Indepedent Alarm
- Capital Purchase or Lease Option Available
- >> Real Time Water Detection Alarm
- WiFi, Cellular, or Modbus Communications Options
- > C1D1 Certified or General Purpose
- Small Footprint (attaches to the outside of the tank)

Non-intrusive Installation

Low Power (24 VDC Hardwired)

ORDERING PROCESS: (EXAMPLE: WD1000A:B1:C1:MA:EX:1:W1:Y:HW)

			MOUNTING							
		BASE MODEL	HOUSING	MOUNTING STYLE	MOUNTING	CLASS	POWER	MODBUS	EDGE	ES COMM
	(example)	WD1000A	B1 :	C1	MA :	EX	: 1	: W1 :	Y	: HW
YOUR ORDER:		WD1000A								
		BASE MODEL	HOUSING	PIPE SIZE	MOUNTING	CLASS	POWER	MODBUS	EDGE	ES COMM



info@perceptivesensors.com



perceptivesensors.com

MODEL NUMBER

Water-ID

OPERATIONAL EXCELLENCE & CRITICAL/QUALITY ALERT

BASE MODEL #	DESCRIPTION
WD1000A	Point Level Alarm with Digital Output
HOUSING STYLE	
B1	Integral Sensor and Electronics
B2	Electronics remote mounts from sensor via 6' cable for mounting electronics remote
MOUNTING SURFACE	
C1	Adaptable for curved or flat tanks
MOUNTING	
EP	Epoxy Mount System (Ashesive Included)
PC	Pipe Clamp
MA	Magnet (hurricane rated)
I SM	Magnet (hurricane rated, secured for anti theft)
ENCLOSURE / CLASSIFICATION	, ,
G P	NEMA 4X / General Purpose
EX	Class 1 Groups C, D Class 2 Groups E, F, G (rated)
POWER	
1	Hardwired DC Power 24VDC (Class II Power Supply provided by customer)
MODBUS COMMUNICATION	(COMMUNICATION FROM PIPE MOUNTED DEVICE TO EDGE SERVER)
H1	Hardwired Modbus RTU RS485
W1	Wireless Modbus RTU RS485 (900 MHz Following ISA/SP100 Standards)
EDGE SERVER	(NON-PST EDGE SERVER VOIDS WARRANTY)
Υ	Yes, I need an Edge Server
N	No, I already have a PST Edge Server I will use at my facility
_	
EDGE SERVER COMMUNICATIONS	(Commonwork from EDGE GENERAL TO DEVICE GOLGOMING THE BATALOGE BATALOGY)
WF	WiFi - 2.4 GHz (802.11 b/g/n)(Ability to connect to customer WiFi network)
C1	Cellular (AT&T) (Customer Data Plan Required) (Used for cloud backup if desired)
HW	Hardwired - Ethernet Only
NA	l already have a PST Edge Server at my facility

MODRIIS COMMUNICATIONS



HOW DO YOU WANT YOUR SENSOR TO COMMUNICATE WITH THE PST EDGE

HARDWIRED MODBUS RTU RS485 (SELECT H1)

WIRELESS MODBUS RTU RS485 (SELECT W1)

DOT EDGE CEDVED

EDGE SERVER COMMUNICATION



ETHERNET/INTERFACE INTO LOCAL NETWORK (SELECT WF)

CELLULAR (AT&T) (SELECT C1)

HARDWIRED MODBUS RTU RS485 (SELECT HW)



CLOUD OR CUSTOMER CONTROL SYSTEM



PST SENSOR